



Instruction manual

ENGLISH

XP

596.042 - 596.047 - 596.052 - 596.057
596.040 - 596.045 - 596.050 - 596.055

ATTENTION:
Read the instruction before use





INTRODUCTION	3
EXPLANATION OF PICTOGRAMS	4
SAFETY REGULATIONS	5



INSTRUCTIONS FOR THE INSTALLER	7
--------------------------------	---



INSTRUCTIONS FOR THE USER	14
---------------------------	----

INTRODUCTION

Dear Customer,

We would like to congratulate and thank you for choosing to purchase an appliance in the **SpidoCook™** range by Unox; we hope this is just the beginning of a fruitful and long-lasting partnership.

As you are aware, the **SpidoCook™** range of grills, are equipped with the **SHB** system for contact and infra-red cooking, and ultra-rapid and uniform heating hobs.

The contact grills of the **SpidoCook™** by UNOX are available in the manual and digital version with the innovative SpidoTouch control.

UNOX S.p.A.

Dealer:

Installer:

Installation date:



Explanation of pictograms



Danger! Situation presenting immediate danger, or a hazardous situation which could cause injury or death.



Danger: fire hazard!



Danger: electric shock!



Read operator's manual



Danger: risk of burns



Tips and useful information



Protective earth symbol



Equipotentially symbol



Consult other chapter

Safety regulations



Safety regulations for installation and maintenance

- **Read this guide carefully before installing or maintaining the appliance, and conserve this guide with care for any future consultation of users.**
- **All installation, assembly and non-routine maintenance operations must be performed exclusively by qualified technicians that are authorised by UNOX, in compliance with the regulations in force in the user country and with respect to the regulations on systems and work safety.**
- Disconnect the oven from its electrical mains supplies before installation or maintenance
- Check that systems are compliant to the installation country standards and to the specifications indicated on the appliance rating plate before installing the appliance.
- Interventions, alterations or modifications not expressly authorised that do not comply with the indications in this manual shall invalidate the guarantee.
- Installation or maintenance that fails to respect the indications in this manual may cause damage, injury or fatal accidents.
- Given its potential danger, the package material must be kept out of reach of children or animals, and properly disposed of as called for by local regulation.
- The ratings plate provides essential technical information that is of utmost importance for any appliance maintenance or repairs. Do not remove, damage or modify the plate.
- Failure to follow these regulations may cause damage or (fatal) injury, subsequently invalidating the guarantee and relieving UNOX of all liability.



Safety regulations for use

- **Read this guide carefully before using the appliance or performing routine maintenance, and conserve this guide with care for any future consultation of users.**
- **Following procedures other than those indicated in this guide to use and clean the appliances is considered inappropriate and may cause damage, injury or fatal accidents; in addition to invalidating the guarantee and relieving UNOX of all liability.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children must be supervised to ensure they do not play with the appliance.
- This appliance can only be used for cooking food in industrial and professional kitchens upon completion of scheduled training courses; all other uses are not compliant to the scope of use and therefore hazardous. In particular, the appliance can be used for:
 - Cooking food on the grill;
 - Grill meat, fish and vegetables;
 - Toasts, Sandwiches and Focaccia.
- Monitor the appliance during its entire operation cycle.
- If the appliance does not function or if there are any functional or structural alterations, disconnect the electricity and contact an UNOX authorised customer service agent. Do not attempt to independently repair the appliance. Request UNOX original spare parts for any repairs necessary.



Failure to observe these regulations may cause damage or (fatal) injuries, and also invalidates the guarantee.

- To ensure that the appliance is in perfect use and in a safe condition, maintenance and inspections should be performed yearly by an authorised customer service agent.
- Do not use the contact grills **SpidoCook™** by UNOX to heat pots or pans
- Should not be placed on the glass ceramic surfaces aluminum foil or plastic containers.
Do not install the appliance near flammable materials.
- Do not use foods containing highly flammable ingredients (e.g. alcohol-based foods). Substances with a low flammability point may burst into flames and therefore constitute a fire.
- If the appliance is placed on a support structure on wheels, make sure that any movement will not damage electrical wiring or any other components.



RISK OF BURNS and INJURY!

- Pay high attention while the contact grill is working as it gets very hot, can cause severe skin burns. In case of burns immediately cool down the burned part with cold running water and seek medical advice To prevent accidents and to avoid damaging the appliance, all personnel should be informed as to normal safety procedures and given the necessary training.



RISK OF FIRE!

- When using the appliance for the first time, make sure over the cooking surface of the contact grill **SpidoCook™** by UNOX there are no instruction manuals, plastic bags or accessories.
- Before to turn on the contact grill for the first time, insert the fat collection drawer. Then you need to clean the glass ceramic surfaces with a damp cloth and a mild detergent to remove grease industrial protective which is deposited on the surface during manufacture. Once it dries, turn the power on and let the appliance run for at least an hour at the maximum temperature. Presence of smoke and odors are considered transient phenomena due to the degradation of industrial oils in the stainless steel parts. This phenomenon will be no longer present for successive starting of the appliance.
- **Do not place sources of heat (i.e. grills, fryers, etc.), highly flammable substances or fuels in the vicinity of the appliance (i.e. gasoline, petrol, bottles of alcohol, etc...).**
- Do not use highly flammable food or liquids while cooking (ex. alcohol).



RISK OR ELECTRICAL SHOCK

- Do not open the compartments marked with these symbols: access is reserved to qualified installer authorised by UNOX.
Failure to observe this regulation invalidates the guarantee and may cause damage or (fatal) injuries.



INSTRUCTIONS FOR THE INSTALLER



Contents

Trasporting and unpacking	8
Getting started	9
Checking package contents	9
Removing the protective film	9
Fat collection drawer positioning	9
Positioning	10
Characteristics of the installation area	10
Models	10
Appliance distances	11
Electrical connections	12
Checks	13
Replacing the power supply cable	13




Before installing the appliance carefully read chapter "Safety regulations" (page 5).
 During installation, wear appropriate protective clothing (protective footwear, gloves, etc.).

Trasporting and unpacking






Make sure that the appliance is not in danger of tipping over during transportation. Check the package on receipt for any visible damage. If damage is found, immediately contact UNOX and **DO NOT** install the appliance.

! The packaging materials, given their potential danger, must be kept out of reach of children and animals, and correctly disposed of in compliance with local regulations.

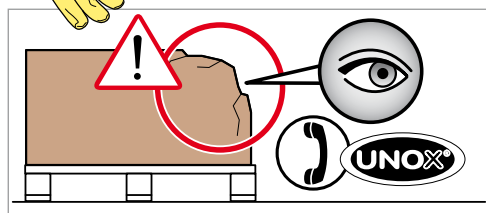


UNOX has followed the **NON-STOP EFFORTS** philosophy for years to increase the environmental compatibility of its products to reduce energy consumption and wastes.

UNOX wishes to protect the environment and invites the consumer to dispose of waste in recycling bins.

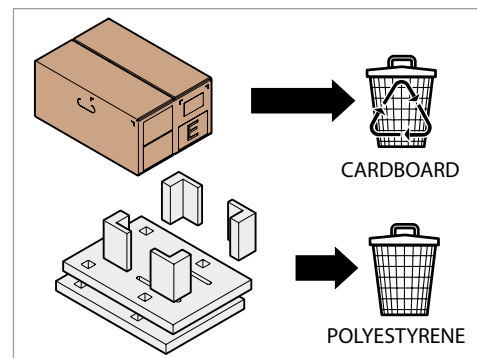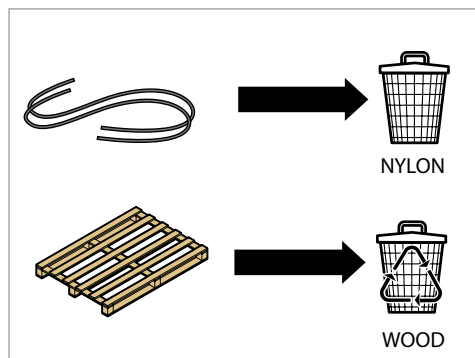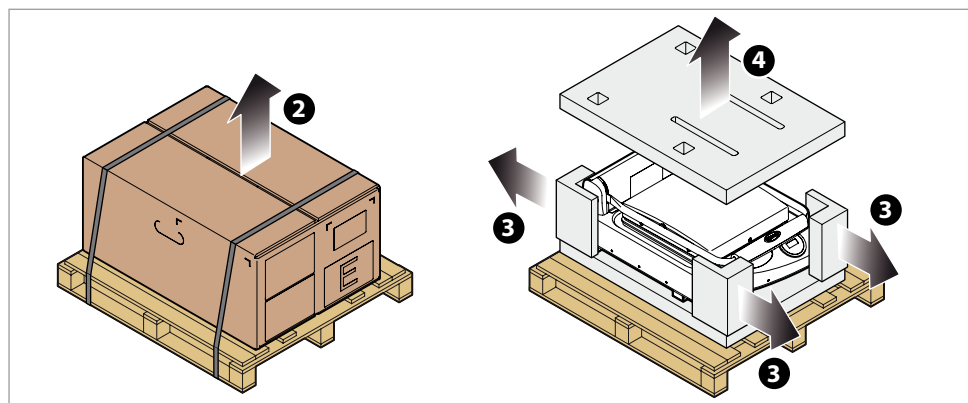

Getting started


Checking package contents

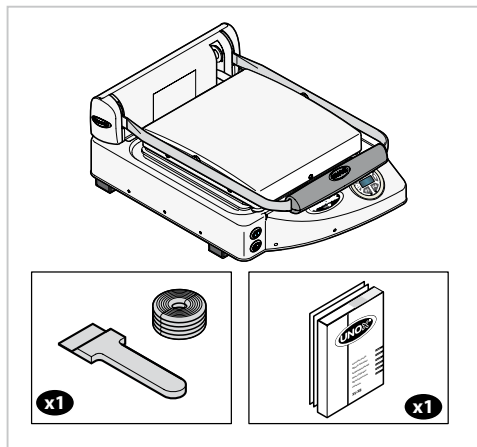

Before installing the appliance, check that the following packaged components are present and free of damage:

- **SpidoCook™** grills
- technical documents (use and installation manual, "technical specifications" sheet);
- scraper;
- brass scourer.

Removing the protective film

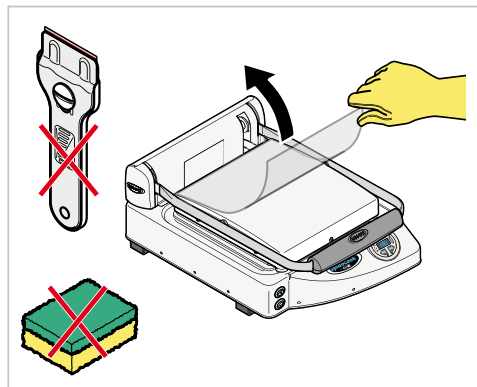


Slowly remove the protective films from the appliance: clean any glue residue with appropriate solvents without using tools, abrasive detergents or acids that could ruin the surfaces.



The removed film, given its potential danger, must be kept out of reach of children and animals; and correctly disposed of in compliance with local regulations.

Fat collection drawer positioning

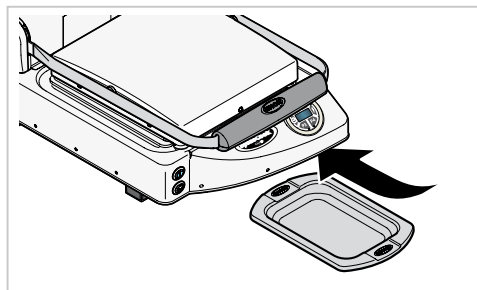


The supplied fat collection drawer to collect the liquid waste that is deposited on glass ceramic surfaces. The rounded drainage channel for the liquids, flowing all around the hobs, can easily convey liquids and dirt into the removable drawer to further facilitate the clearing. Before to use for the fist time the grill insert the supplied fat collection drawer in the in the front seat as shown in the image.



Positioning

Characteristics of the installation area

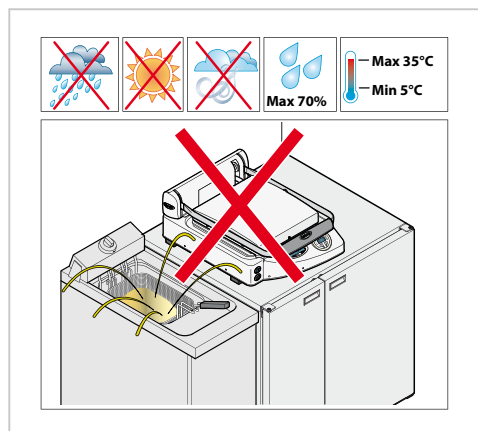

Install the appliance in areas:

- dedicated and conforming to the cooking of industrial foods;
- having adequate air ventilation;
- that comply with the local laws and recommendations;
- protected against the weather;
- with temperatures between +5° to +35°C maximum;
- having a maximum humidity of 70%.



Do not install the appliance near other appliances that reach high temperatures in order to avoid damaging electrical parts.



For additional technical information on the appliance, consult the "technical specifications" sheet attached to the appliance.

Models

Smooth black surfaces

MODELS	CONTROL	SIZE cooking surface (mm)	SIZE L x P x H mm	Electric power (kW)	Weight (kg)
XP 010 P	manual	250x250	331 x 458 x 176	1,5	10
XP 010 E	digital	250x250	331 x 458 x 176	1,5	10
XP 020	manual	250x250 (x2)	619 x 458 x 176	2	17
XP 020 P	manual	250x250 (x2)	619 x 458 x 176	3	17
XP 020 E	digital	250x250 (x2)	619 x 458 x 176	3	17


Black furrowed upper surfaces

MODELS	CONTROL	SIZE cooking surface (mm)	SIZE L x P x H mm	Electric power (kW)	Weight (kg)
XP 010 PR	manual	250x250	331 x 458 x 176	1,5	10
XP 010 ER	digital	250x250	331 x 458 x 176	1,5	10
XP 020 R	manual	250x250 (x2)	619 x 458 x 176	2	17
XP 020 PR	manual	250x250 (x2)	619 x 458 x 176	3	17
XP 020 ER	digital	250x250 (x2)	619 x 458 x 176	3	17

Transparent smooth surfaces

MODELS	CONTROL	SIZE cooking surface (mm)	SIZE L x P x H mm	Electric power (kW)	Weight (kg)
XP 010 PT	manual	250x250	331 x 458 x 176	1,5	10
XP 010 ET	digital	250x250	331 x 458 x 176	1,5	10
XP 020 T	manual	250x250 (x2)	619 x 458 x 176	2	17
XP 020 PT	manual	250x250 (x2)	619 x 458 x 176	3	17
XP 020 ET	digital	250x250 (x2)	619 x 458 x 176	3	17


Appliance distances

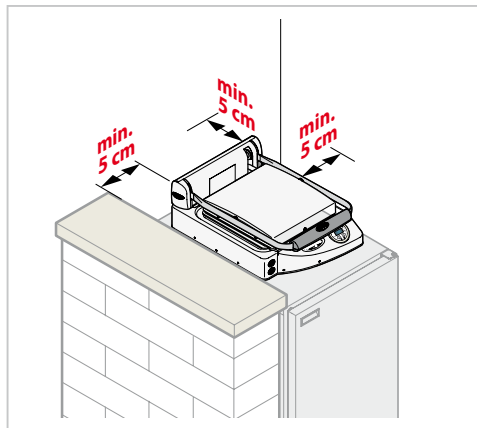

Position the appliance respecting the indicated distances in the diagram and so that the back of the oven is easily accessible for appliance connections and maintenance.



Do not install the appliance near inflammable or heat sensitive materials, walls or furniture. Otherwise, protect them with appropriate non inflammable materials in compliance with fire prevention regulations.

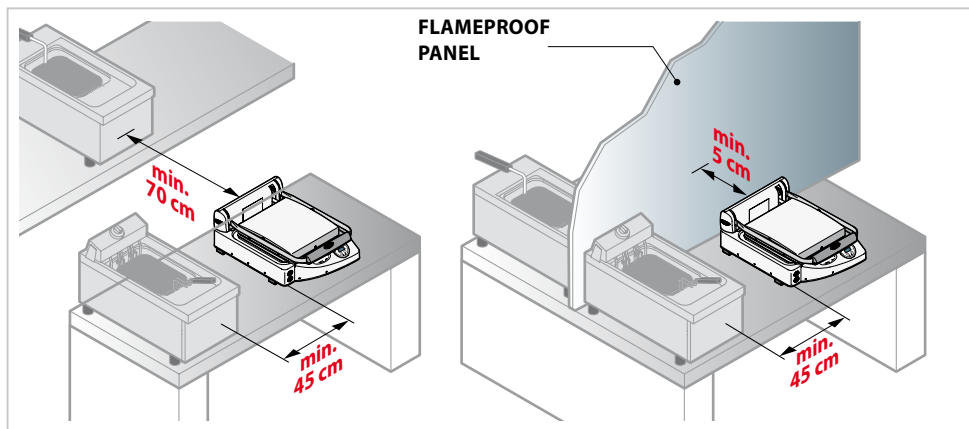




Electrical connections



Before installing the appliance carefully read chapter “Safety regulations” (page 5).



Connections to the main power and the electrical system must comply with the regulations in force in the country of installation of the appliance; and all connections must be performed by qualified installer authorised by UNOX. Failure to comply with these regulations may cause damage and injuries, invalidates the guarantee and relieves UNOX of all liabilities.

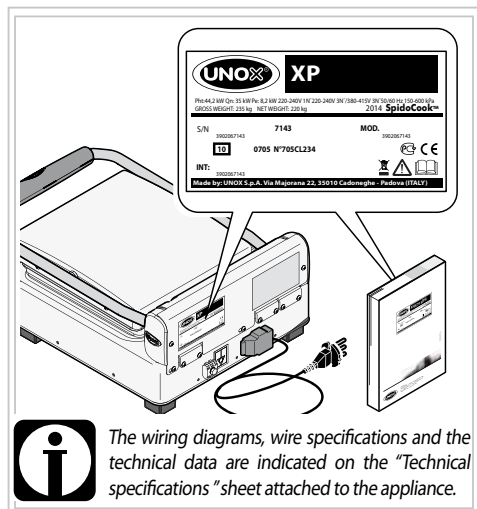

Before connecting the appliance to the mains electricity, always compare the power supply data with that of the appliance specified on the rating plate.

The appliance must be positioned so that the power plug is accessible (for appliances fitted with Schuko plugs).


The appliance has its power cable already factory mounted to the terminal board: not undergo any other type of electrical connection and no dimensional modification of the cable other than extensions, replacing it only with one having specifications equal to the original factory cable (type of rubber, cross-section, etc.).





The wiring diagrams, wire specifications and the technical data are indicated on the “Technical specifications” sheet attached to the appliance.

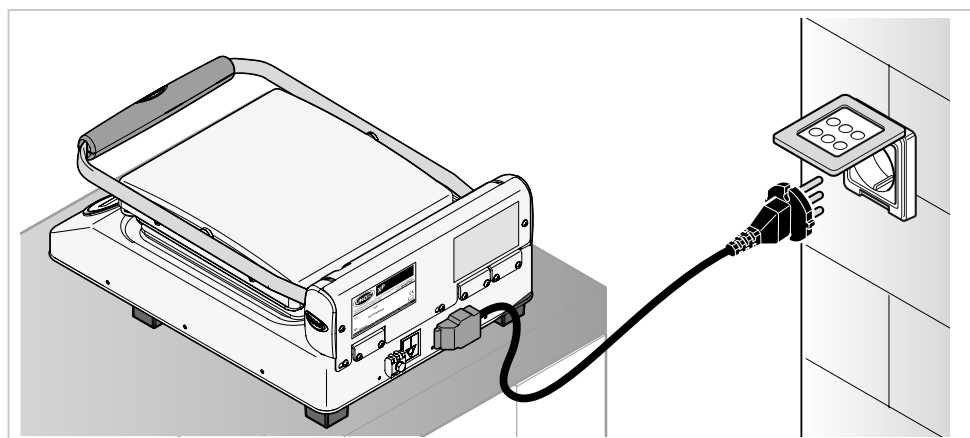


The cable must be replaced by UNOX or by its technical assistance service, and in all cases by a person with similar qualification in order to avoid possible risks.



For proper electrical connections, the appliance must:


- Be wired into an equipotential system in accordance with current regulations. This connection must be performed between different appliances with the terminal marked with the equipotential symbol . The wire must have a maximum cross-section of 10 mm² (according to IEC EN 60335-2-42:2003-09 standard) and be yellow-green.
- Must be grounded  to the earthing (green-yellow wire).
- Must be connected to a thermal differential switch in compliance with the regulations in force.
- Must be connected to an omnipolar circuit breaker.

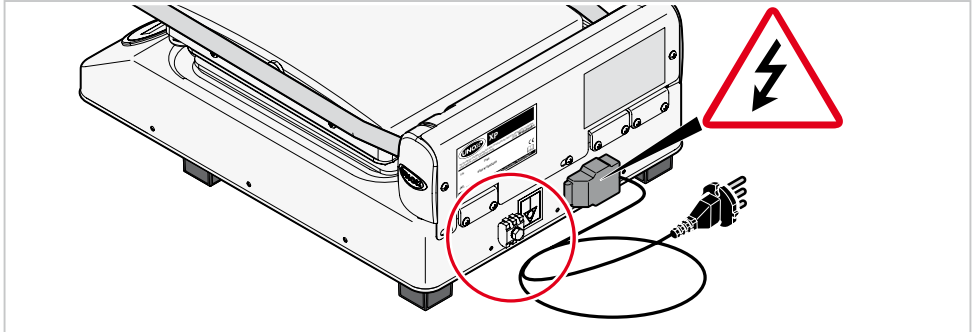

Checks

- The copper jumper and the electrical cable must be secured together beneath the screw in its tightening direction; and the electrical connections must be well secured before connecting the appliance to the mains electricity.
- check for any electrical dispersion between the phases and the ground, and for electrical continuity between the external casing and the main ground line.
- Check that the power supply voltage does not deviate from the nominal voltage value specified on the appliance rating plate when the appliance is operating.

Replacing the power supply cable

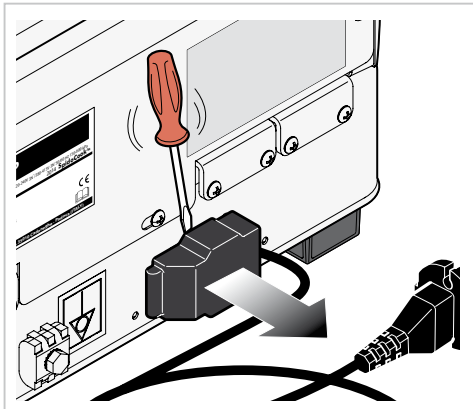


The cable must be replaced by UNOX or by its technical assistance service, and in all cases by a person with similar qualification in order to avoid possible risks.

Follow the procedures below to replace the power supply cable:

- open the terminal board cover;
- remove the cable by disconnecting it from the terminal board;
- consult the "Technical Specifications" sheet (*Power supply-Connection Diagram*): the sheet indicates all possible wiring diagrams and the specifications that the new cable must have in reference to the wiring selected (*Cable Type*);
- secure the new cable using the cable clamp;
- Close the terminal board cover.



INSTRUCTIONS FOR THE USER

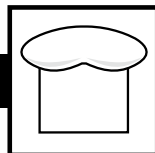

Contents

General appliance operating instructions	15
Manual control operation	15
SpidoTouch digital control operation	16
Oven-user communication (only for models with digital control)	17
Routine maintenance	18
Inactivity	19
Disposal	19
After-sales assistance	20
Certification	21
Guarantee	21

INSTRUCTIONS FOR THE USER




Before using the appliance:

- make sure that you have a system conformity and use permit certificate that is issued by a UNOX authorised installer;
- carefully read chapter "Safety regulations" (page 5).

General appliance operating instructions


- Thoroughly clean the appliance when using it for the first time (refer to the "Routine maintenance" section on page 18); let it run without food on the plate and at the maximum temperature for approximately 1 hour in order to eliminate any unpleasant odours caused by the protective grease used in the factory. This phenomenon will be no longer present for successive starting of the appliance.
- Operate the **SpidoCook™** by UNOX at a room temperature between +5 °C e +35 °C (41 e 95 °F).
- Do not use the contact grills **SpidoCook™** by UNOX to heat pots or pans.
- Should not be placed on the glass ceramic surfaces aluminum foil or plastic containers.

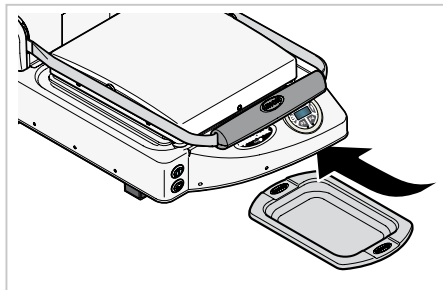

RISK OF BURNS and INJURY!

- Pay high attention while the contact grill is working as it gets very hot, can cause severe skin burns. In case of burns immediately cool down the burned part with cold running water and seek medical advice. To prevent accidents and to avoid damaging the appliance, all personnel should be informed as to normal safety procedures and given the necessary training.

Manual control operation

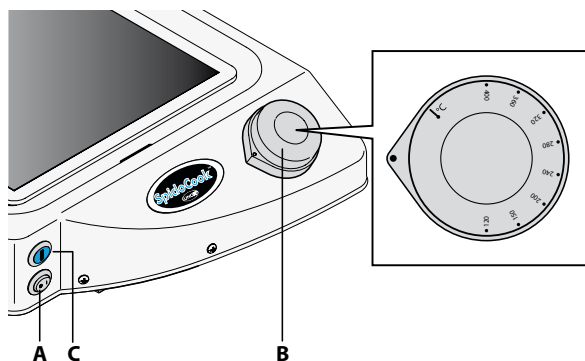

Control Panel:

Power switch (A)

Activates the unit.

- Button located outside: contact grill off
- Button located inside: contact grill on

Thermostat knob (B)

Rotate clockwise the thermostat knob and set the cooking temperature (from 120 to 140 °C°).


Temperature light (C)

● Light on: Heat is on.

● Light off: Set temperature reached



SpidoTouch digital control operation

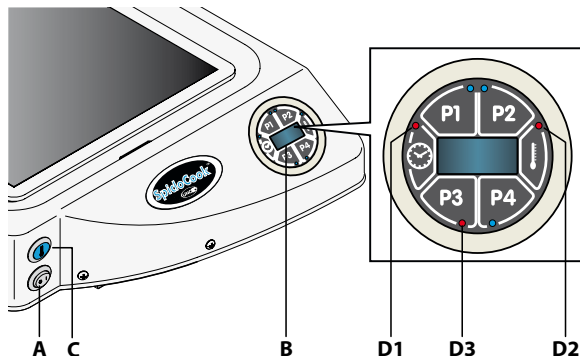

Control Panel:

Power switch (A)

Activates the unit.

■ Button located outside: contact grill off

■ Button located inside: contact grill on

SpidoTouch digital control (B)

Allows you to set the cooking time and temperature and store up to 4 programmes.

Temperature light (C)

● Light on: Heat is on.

● Light off: Set temperature reached

Time and cooking temperature parameter setting



Time

0 = STOP (grill OFF)

00:01....9:59 (maximum time)

INF= infinite operation (plate always on)



temperature

(max. 300°C)

- Set the cooking duration by repeatedly pushing (slow mode) or holding down (fast mode) the button until the desired time appears on the screen (the value has been saved when the LED (D1) stops flashing).
- The countdown starts right after having set the duration with a value other than "0", and the plate will start to heat until reaching the pre-set temperature of 200°C. To change this value, push the button until the desired temperature appears on the screen (the value has been saved when the LED (D2) stops flashing).
NOTE: if you press the button before the duration LED (D1) has stopped flashing, the plate will heat until it reaches a temperature of approximately 200°C.
- To prematurely stop cooking, repeatedly press the button until 00:00 appears on the screen.

• **Example: If you want to cook at a temperature of 220°C for 5 minutes and 30 seconds.**

Turn on the plate with the button (A), hold down the button until 5.30 (5 minutes and 30 seconds) appears on the screen. After a few seconds, the LED (D1) stops flashing: the cooking time has been saved, the countdown starts and the plate starts to heat to the pre-set temperature of 200°C.

To increase the temperature, hold down the button until the temperature of 220°C appears on the screen.

After a few seconds, the LED (D2) stops flashing: the cooking temperature has been saved.

When the pilot light (C) turns off, the plate has reached the set temperature (220°C).

Program storage and use

Up to **four** programmes (**P1**, **P2**, **P3** and **P4**) can be saved for subsequent use.

PROGRAM STORAGE

Set the time and temperature parameters as describe previously (example 8 min. / 220°C).


To store the program press and hold the button **P1**, **P2**, **P3** or **P4** (ex. P3) for at least 3 seconds: the confirmation of recording takes place with the light on for one second of the LED light (D3) and the buzzer.

E.g.: Programme P3 = the plate will work at 220°C for 8 minutes

USING A PROGRAMME

To start one of four programs from the state "STOP" (0- grill OFF) or "INFINITY" (INF - plate continuously on) push **P1**, **P2**, **P3** or **P4**.

At the end of the program will be restored the initial state (STOP o INFINITY).

In case the user start a program the cooking time can be stopped press the key  by taking the time to zero or by pushing the button of the program in use.

Oven-user communication (only for models with digital control)

The digital control panel SpidoTouch used in **SpidoCook™** digital grills is designed to alert the user to possible error messages or failure.

If there is any warning or allarms push the button "P4" to slide them.

Warning messages:

When a malfunction is detected which allows the appliance to continue operating, albeit in a limited manner, a **WARNING** message is displayed. The device continues to run and the WARNING message remains on the display until any operation button is pressed.

DISPLAY MESSAGE	Description	Effect	Problem solution
W01	The temperature of the appliance power P.C.B. is too high	The appliance continues to operate but there is a risk of permanent damage to the power P.C.	Contact the Customer Assistance Service
W02	The temperature of the appliance control board is too high	The appliance continues to operate but there is a risk of permanent damage to the control board	Contact the Customer Assistance Service
W10	Basic control board setting error	The appliance keeps on working (with some limitations due to the setting involved on the error)	Contact the Customer Assistance Service

Alarm messages:

When a condition arises which prevents the appliance from operating at all, an **ALARM** signal is displayed and the appliance must be switched to its **STOP** status. The device stops operating and the **ALARM** message appears on the oven display until the problem is resolved. If the device is operating when the ALARM status occurs, it will shut down and the alert corresponding to the detected problem will be displayed. To resolve a problem of this type, contact an Authorised Assistance Centre. Once the problem has been resolved, the appliance can be reactivated by pressing the «START» button.

DISPLAY MESSAGE	Description	Effect	Problem solution
A01	Temperature probe alarm	Appliance shutdown	Contact the Customer Assistance Service
A03	The control board is no longer communicating with the power board	Appliance shutdown	Contact the Customer Assistance Service

Maintenance in case of failure:

In case of failure, in case of failure, failure of the ceramic surface or in case of occurrence of cracks, immediately disconnect the unit from the mains and call a service center for replacement of glass.



Routine maintenance



Any routine maintenance procedure must be performed:


- after disconnecting the appliance from the power supplies;
- after having put on the proper personal protection equipment (i.e. gloves, etc...).

Clean the grill daily to maintain proper levels of hygiene.

When cleaning any component or accessory NEVER use:

- abrasive or powder detergents;
- aggressive or corrosive detergents (i.e. hydrochloric/muriatic or sulphuric acid). Caution! Never use these substances also when cleaning the appliance substructure and floors;
- abrasive or sharp tools (i.e. abrasive sponges, scrapers, steel bristled brushes, etc...);
- water sprays.

External steel structures/drawing :

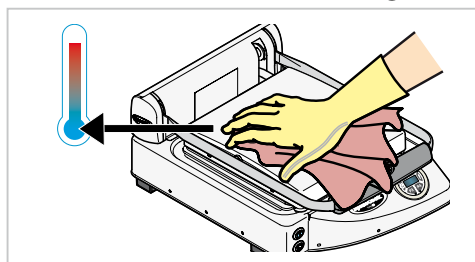

Wait for the surfaces to cool off.

Use only a soft cleaning cloth dampened with a little soap and water. Rinse and dry completely.

As an alternative, only use detergents recommended by UNOX; other products may cause damage thereby invalidating the guarantee. Read the instructions provided by the detergent producer for their use.

Glass ceramic contact grills:



The glass ceramic contact grills, even if very hot don't give the feeling of the actual heat, therefore, before cleaning them off, make sure they have completely cooled.

Use only a soft cleaning cloth dampened with a little soap and water. Rinse and dry completely.

Do not use acids, solvents and / or ammonia (alcohol, benzine, thinner, etc..) that could self-ignite when thrown on the grill when it is not completely cooled.

For the cleaning of the appliance do not use any tools that might damage the glass ceramic, it is necessary to use the scraper with rounded edges of the blade that came with the grill.

Use the scraper with caution and make sure the blade contact the plates very good. Do not use the edge of the scraper as this may cause scratches on the plate that would compromise the overall appearance and cleanability.

Substitute the blade of the scraper whenever when it is no longer perfectly sharp.

After using the scraper cover the blade with the special protection and do not leave the scraper unattended within the reach of children.

Collection of cooking waste:

The cooking residues are channeled through the hole in the gutter directly in the dripping tray under the contact grill. Therefore proceed to empty the tray regularly to prevent internal overflows.

Inactivity

Follow the precautions below during inactivity:

- disconnect the power supplies to the appliance;
- we recommend rubbing a soft cloth lightly doused with mineral oil on all stainless steel surfaces.

At first reuse:

- clean the appliance and its accessories thoroughly (see chapter "Routine maintenance" at page 18);
- restore the power supplies to the appliance;
- inspect the appliance before using it;
- switch on the appliance at minimum temperature for 50 minutes without any food on the grill.



It is best to have an authorised customer assistance service perform maintenance and inspection on the appliance at least once a year to ensure top working and safety conditions.

Disposal

In pursuit of article (No.). 13 of law 25 July 2005, No. 151 "Implementation of the Directives 2002/95/EC, 2002/96/EC and 2003/108/EC.



The product must undergo separate collection processes and cannot be disposed of as general waste when reaching end of life; keep in mind that illegal or incorrect product disposal incurs penalties as put forth by the current laws in force.

All appliances are made with recyclable metals (stainless steel, iron, aluminium, galvanized steel, copper, etc.) for more than 90% of overall weight: disposal of the product at the end of its life must be performed by electronic and electrical waste recycling centres, or the appliance must be returned to the dealer when buying a new equivalent product, on a one to one basis.

Render the appliance for disposal useless by removing the power cable and any compartment or cavity closure latch (where present) to avoid possible entrapment of persons.

Contact the local waste disposal centre for additional information.



After-sales assistance

In case of any malfunctions, disconnect the appliance from its power and contact a UNOX authorised technical customer service. Provide the following information:

- the date of purchase;
- the appliance data on the serial plate.



Manufacturer's information:

UNOX S.p.A.
Via Majorana, 22
35010 Cadoneghe (PD) Italy
Tel +39 049 86.57.511 - Fax +39 049 86.57.555
info@unox.com www.unox.com

Certification

EU declaration of conformity for electrical appliances

Manufacturer: UNOX S.p.A.

Address: Via Majorana, 22 - 35010 Cadoneghe, Padua, Italy

Declares, under its own responsibility, that the product

SpidoCook™

complies with Low Voltage Directive 2006/95/EC and is built in compliance with the following standards:

EN 60335-1:2002 + A11:2004 + A1:2004 + A12:2006 + A2:2006 + A13:2008 + A14:2010 + A15:2011

EN 60335-2-38:2003 +A1:2008

EN 62233:2008 (3)

complies with EM Compatibility Directive 2004/108/EC and is built in compliance with the following standards:

EN 55014-1: 2006 + A1: 2009

EN 55014-2: 1997 + A1: 2001 + A2: 2008 + IS: 2007

EN 61000-3-2: 2006 + A1: 2009 + A2: 2009

EN 61000-3-3: 2008

Guarantee

Installation of the UNOX product must be performed by an Authorised UNOX Assistance Service. The installation date and appliance model must be documented by the end purchaser, by means of written confirmation or an installation invoice issued by the dealer or the Authorised UNOX Customer Assistance Service, otherwise this guarantee will not be valid;

The UNOX guarantee covers all malfunctions objectively linked to production defects. The guarantee excludes damage due to transport, poor product storage or maintenance or incorrect product use. Also excluded is damage due to installation not conforming to the technical specifications provided by Unox and linked to the environment of use, such as, for example, unclean and aggressive water supply, low quality gas supply, or electrical supply failing to provide nominal voltage and power ratings.

The guarantee also excludes any damage due to power surges or tampering by unauthorised or incompetent persons. The guarantee is also invalidated for damage to the appliance by lime scale deposits. In addition, the guarantee does not cover consumables, such as: seals, light bulbs, glass panels, decorative parts and parts consumed during use.



Guarantee rights will also be invalidated in the event of damage arising as a result of incorrect installation, or installation which has not been carried out by an Authorised Customer Assistance Service.



EMGA International B.V.

Groot Mijdrechtstraat 42
Postbus 32

3640 AA Mijdrecht

 +31 (0)297-282341 -  +31(0)297-287405

 www.emga.com

 info@emga.com

UNOX S.p.A.

Via dell'Artigianato, 28/30 - 35010 - Vigodarzere (PD) - Italy

Tel.: +39 049 86.57.511 - FAX: +39 049 86.57.555

info@unox.com

www.unox.com